



FULL DEPTH PATCH DETAIL - CONCRETE BASE

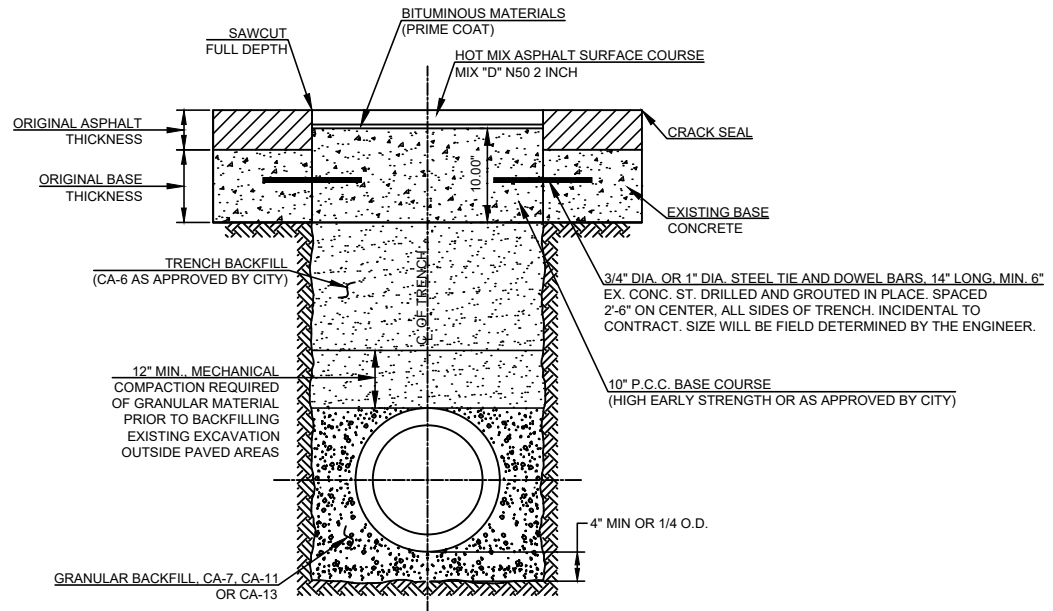

NOTES

1. SAWCUT SHALL NOT EXTEND BEYOND CORNER OF PAVEMENT PATCH
2. DOWELS AND TIE BARS TO BE USED WHEN EXISTING BASE IS CONCRETE
3. SMOOTH EPOXY COATED DOWEL BARS SHALL BE USED ON TRANSVERSE JOINTS AND EPOXY COATED TIE BARS SHALL BE USED ON LONGITUDINAL JOINTS
4. BACKFILL FOR P.V.C. PIPE MUST USE GRANULAR BACKFILL TO A LEVEL OF 12-INCH (MINIMUM) OVER THE TOP OF THE PIPE
5. TRENCH BACKFILL IS TO BE COMPACTED BETWEEN EVERY LIFT. EACH LIFT SHALL BE A MAXIMUM OF 12"
6. **ALL EDGES SHALL BE CRACK SEALED**

FULL DEPTH PATCH DETAIL - STONE/ASPHALT/BRICK BASE

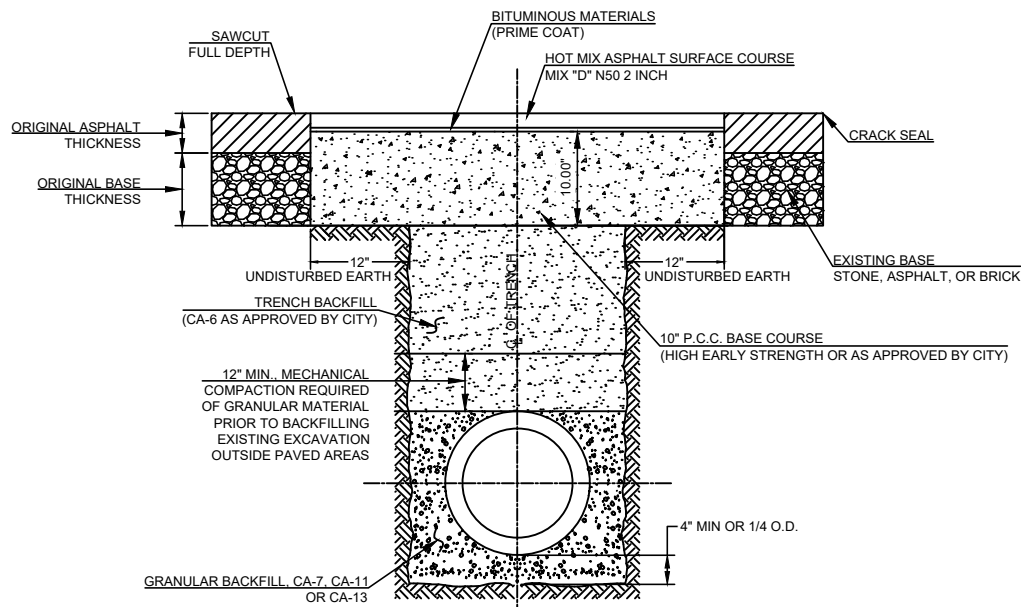

NOTES

1. SAWCUT SHALL NOT EXTEND BEYOND CORNER OF PAVEMENT PATCH
2. 12" OVER CUT REQUIRED WHEN DOWELS ARE NOT PRESENT
3. BACKFILL FOR P.V.C. PIPE MUST USE GRANULAR BACKFILL TO A LEVEL OF 12-INCH (MINIMUM) OVER THE TOP OF THE PIPE
4. TRENCH BACKFILL IS TO BE COMPACTED BETWEEN EVERY LIFT. EACH LIFT SHALL BE A MAXIMUM OF 12".
5. **ALL EDGES SHALL BE CRACK SEALED**

PAVEMENT PATCHING DETAIL