



FULL DEPTH PATCH DETAIL - CONCRETE BASE

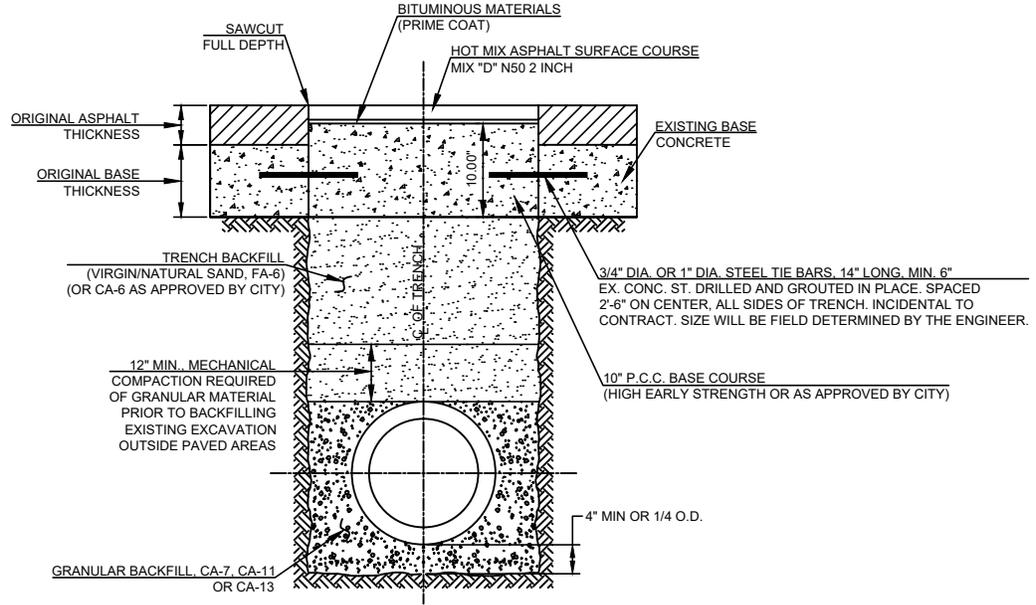

NOTES

1. SAWCUT SHALL NOT EXTEND BEYOND CORNER OF PAVEMENT PATCH AND ALL EDGES CRACK SEALED
2. DOWELS TO BE USED WHEN EXISTING BASE IS CONCRETE
3. DOWELS MUST BE EPOXY COATED
4. BACKFILL FOR P.V.C. PIPE MUST USE GRANULAR BACKFILL TO A LEVEL OF 12-INCH (MINIMUM) OVER THE TOP OF THE PIPE
5. TRENCH BACKFILL IS TO BE COMPACTED BETWEEN EVERY LIFT. EACH LIFT SHALL BE A MAXIMUM OF 12".

FULL DEPTH PATCH DETAIL - STONE/ASPHALT/BRICK BASE

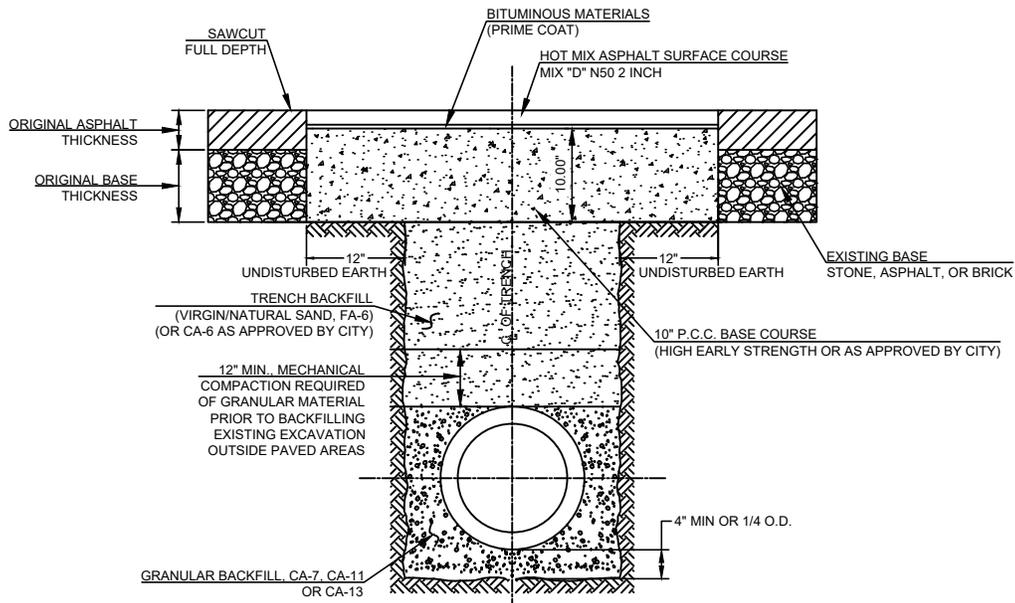

NOTES

1. SAWCUT SHALL NOT EXTEND BEYOND CORNER OF PAVEMENT PATCH AND ALL EDGES CRACK SEALED
2. 12" OVER CUT REQUIRED WHEN DOWELS ARE NOT PRESENT
3. BACKFILL FOR P.V.C. PIPE MUST USE GRANULAR BACKFILL TO A LEVEL OF 12-INCH (MINIMUM) OVER THE TOP OF THE PIPE
4. TRENCH BACKFILL IS TO BE COMPACTED BETWEEN EVERY LIFT. EACH LIFT SHALL BE A MAXIMUM OF 12".

PAVEMENT PATCHING DETAIL